


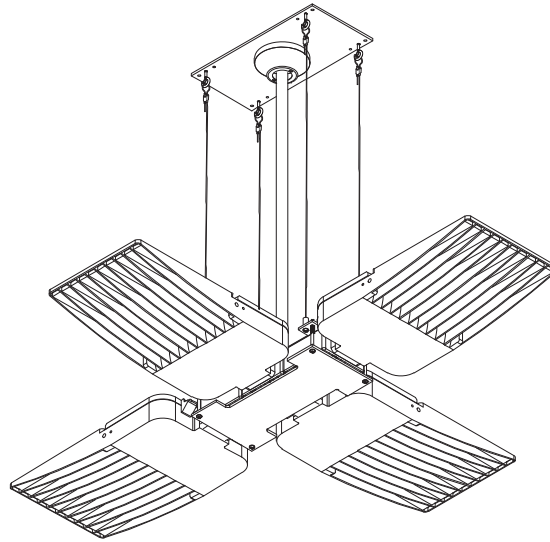


WARNING!

- ENSURE NO POWER IS SUPPLIED TO THE WIRE CABLE AND FIXTURES WHILE INSTALLING.
- READ THE PROVIDED INSTRUCTIONS PRIOR TO INSTALLING.
- INSTALLATION SHOULD BE CARRIED OUT BY QUALIFIED INSTALLERS.
- THE INSTALLER HAS THE FINAL RESPONSIBILITY FOR THE STRENGTH AND RIGIDITY OF THE WALL/CEILING STRUCTURE.
- A MINIMUM OF 2 PEOPLE REQUIRED WHEN INSTALLING LONG LENGTH FIXTURES.




LUMINAIRE SHOWN AS AN UPLIGHT


MOUNT DIMENSIONS

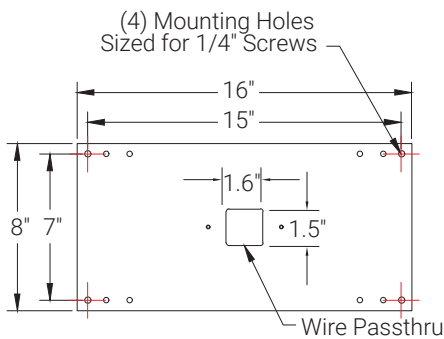


PACKAGE INCLUDES

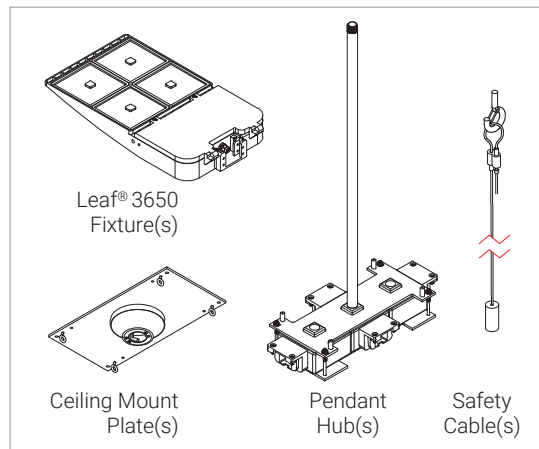

ITEMS NEEDED (BY OTHERS)

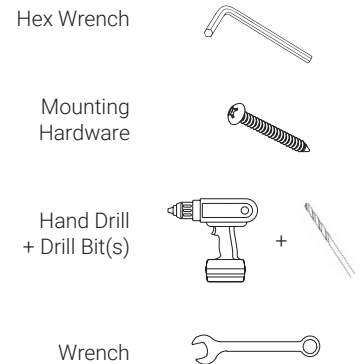


ISOMETRIC / EXPLODED VIEW

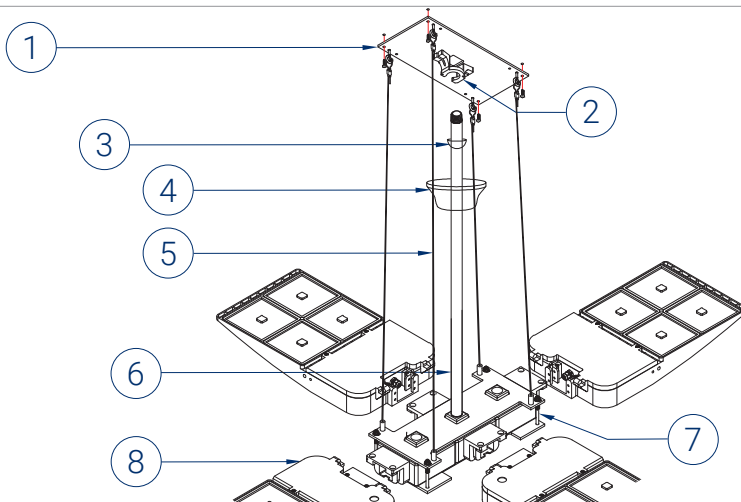

- (1) Ceiling Plate
- (2) Socket Joint
- (3) Leveling Half-Ball Joint
- (4) Canopy
- (5) Safety Cable
- (6) Pendant Stem
- (7) Pendant Hub w/ Mounting Bracket
- (8) Leaf® 3650 Fixture



1 MOUNT CEILING PLATE TO SURFACE

- INSTALL CEILING MOUNTING PLATE WITH SOCKET JOINT TO CEILING.

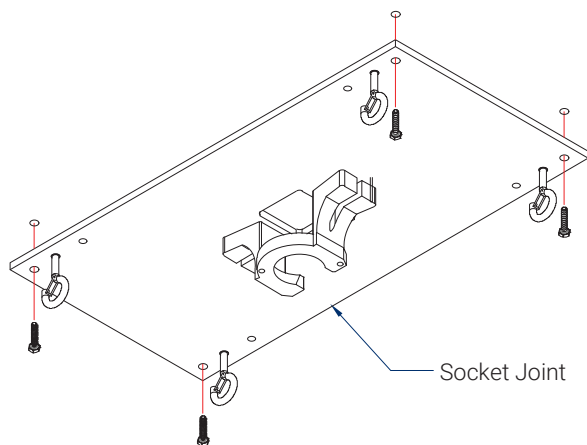


2 ASSEMBLE PENDANT STEM

- SLIDE THE CANOPY ONTO THE PENDANT STEM, THEN SLIDE THE LEVELING HALF-BALL JOINT ONTO THE STEM.
- WIRE THE CORD COMING FROM THE TOP OF THE PENDANT HUB THROUGH THE STEM.
- SCREW THE STEM TO THE PENDANT HUB UNTIL HOLES ALIGN.
- ONCE ALIGNED, TIGHTEN SMALL SCREW THROUGH STEM HOLE (OPTIONAL)

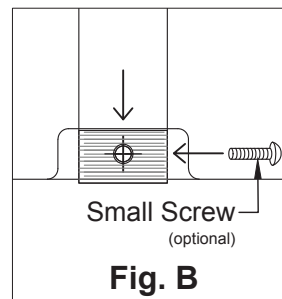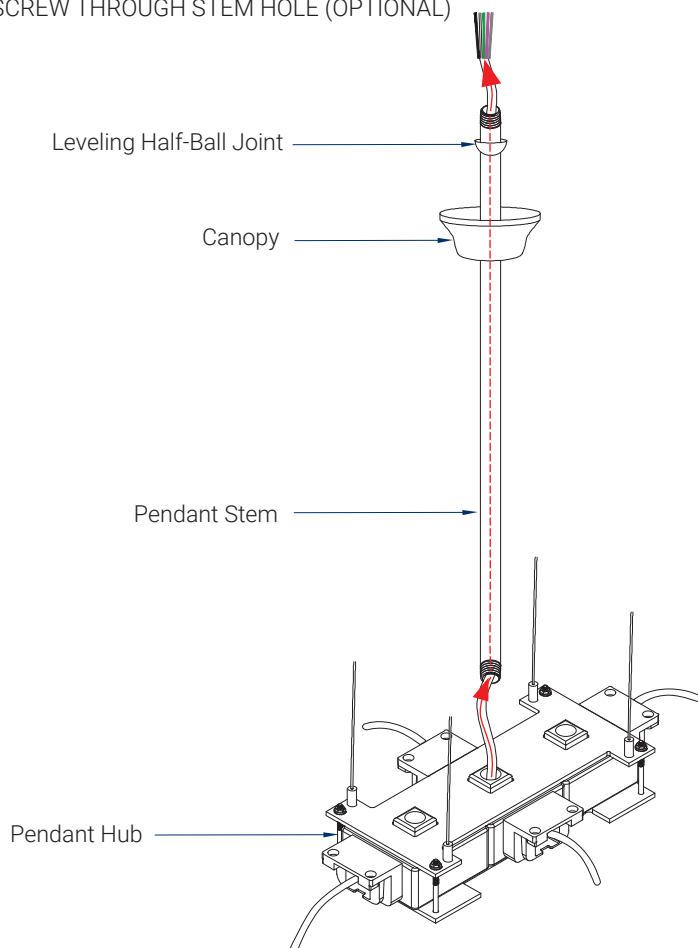

3 ATTACH THE PENDANT HUB ASSEMBLY TO THE CEILING PLATE


- INSERT PIN INTO PENDANT STEM.
- SLIDE UP LEVELING HALF-BALL JOINT, THEN SECURE WITH SET SCREWS.
- LIFT PENDANT HUB ASSEMBLY AND SLIDE PENDANT STEM AND LEVELING HALF-BALL ONTO SOCKET JOINT ON THE CEILING PLATE.
- SLIDE CANOPY IN PLACE AND SECURE WITH SCREWS.

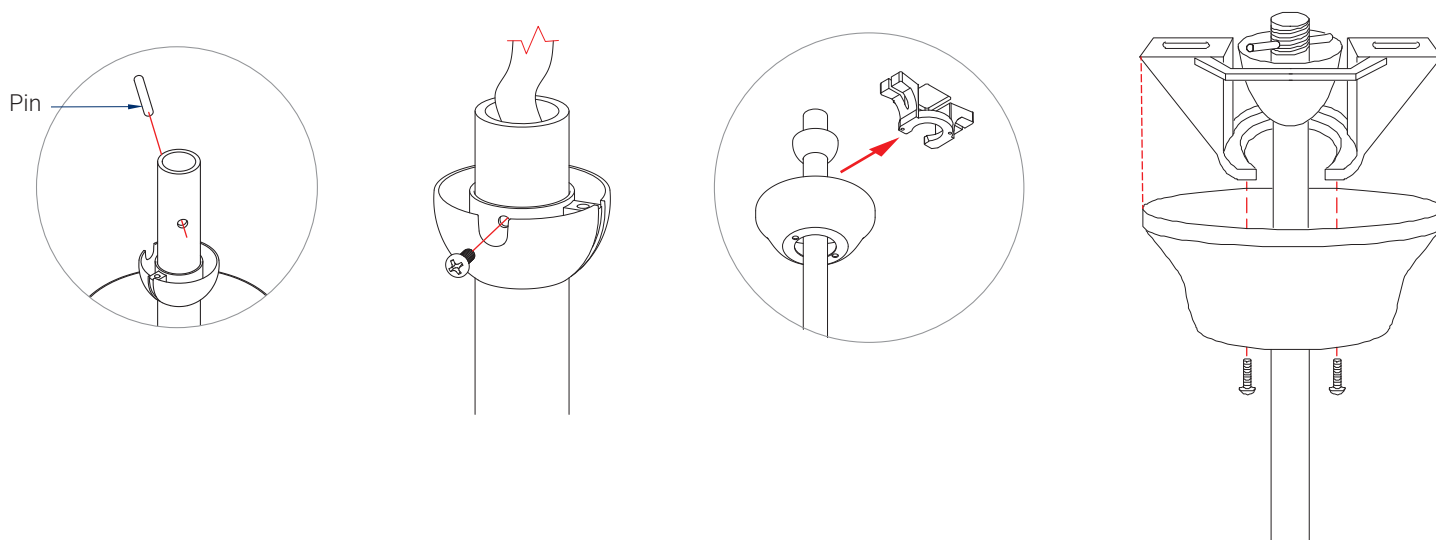

***REQUIRES 2 PEOPLE MINIMUM**


4 ATTACH SAFETY CABLES TO CEILING PLATE

- LOOP THE SAFETY CABLES THROUGH THE EYEBOLTS AND INTO THE LOOPING GRIPPER.
- ADJUST CABLE LENGTHS TO BE TAUT.
- ADD COLLAR TO THE LOOSE CABLE. TRIM EXCESS IF NEEDED.

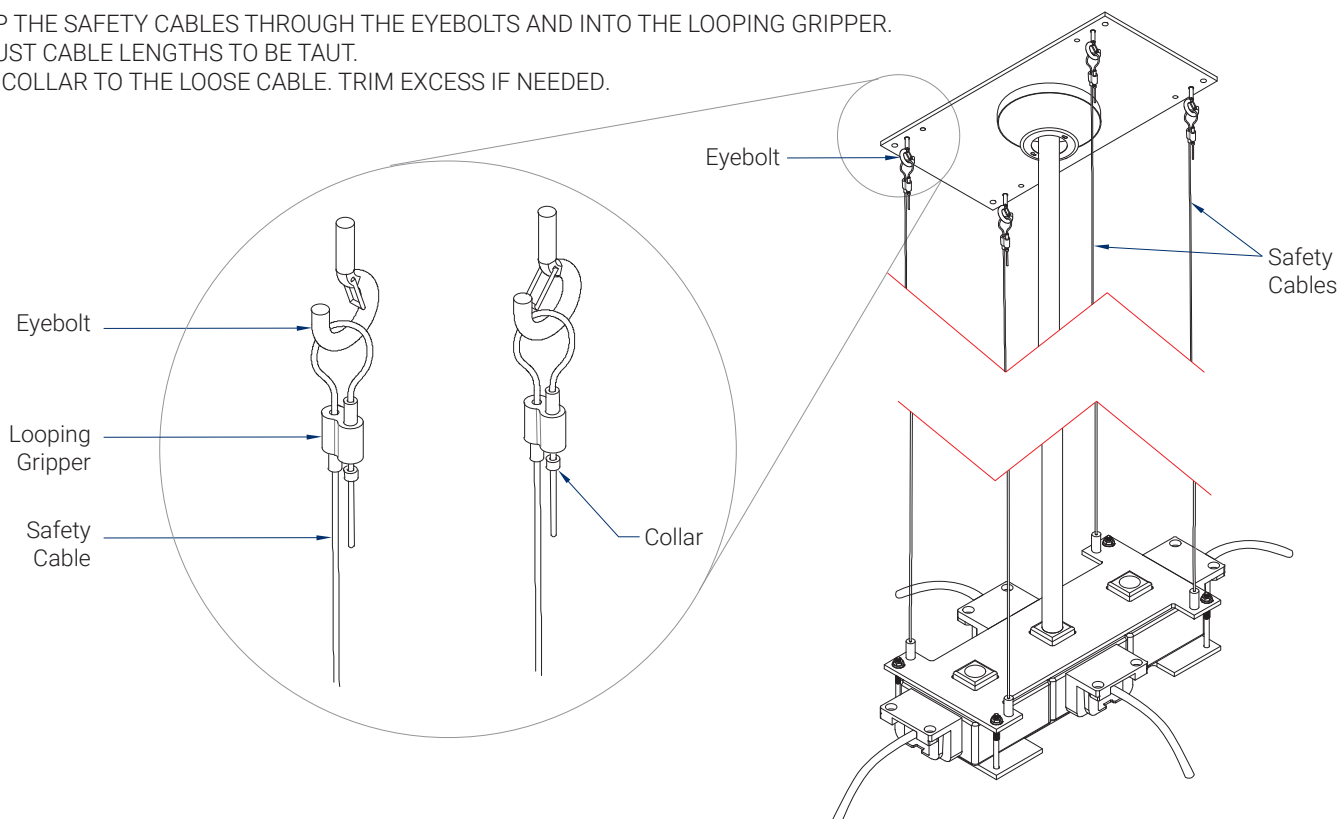

5 ATTACH FIXTURE TO PENDANT HUB

- OPEN THE LEAF 3650 TO ACCESS THE INTERNAL WIRING COMPARTMENT: UNFASTEN THE SCREWS AND SWING OPEN FROM HINGE, AND REMOVE THE COVER.
- FEED THE CORD COMING FROM THE PENDANT HUB INTO THE LEAF 3650 WIRING HOLE AND SECURE WITH CORD GRIP.
- SLIDE THE FIXTURE ONTO THE MOUNTING BRACKET AND SCREW THE FIXTURE IN PLACE. ENSURE THAT THE CABLE IS NOT PINCHED DURING THIS PROCESS.

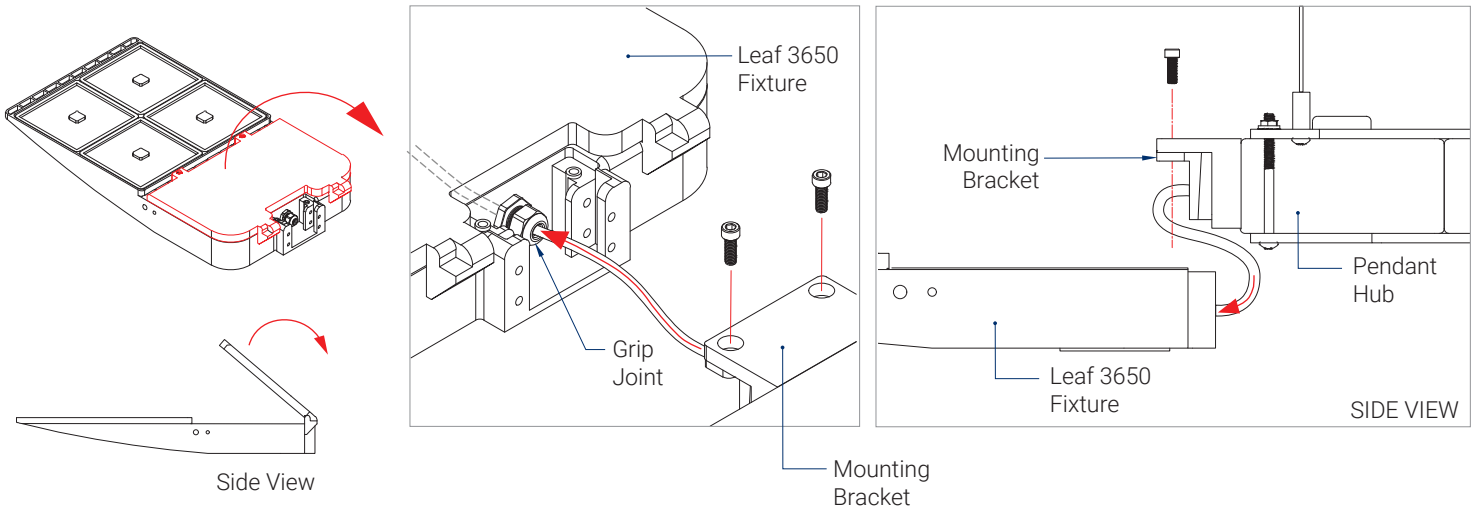

6 WIRE THE CABLE TO THE FIXTURE

- INSIDE THE FIXTURE'S OPEN COMPARTMENT, WIRE THE CABLE TO THE PRE-INSTALLED WAGO CONNECTORS. MATCH COLOR TO COLOR.
- ONCE WIRING IS FINISHED, REPLACE THE FIXTURE COVER: ATTACH FROM HINGE AND SWING CLOSE. SCREW UNTIL SECURE.
- REPEAT STEPS 5 & 6 FOR EACH ADDITIONAL FIXTURE.

BLACK	WHITE	GREEN	PURPLE	PINK
POWER +	NEUTRAL -	GROUND	DIM +	DIM -

