




**WARNING!**


- READ THE PROVIDED INSTRUCTIONS PRIOR TO INSTALLING.
- INSTALLATION SHOULD BE CARRIED OUT BY QUALIFIED INSTALLERS.
- THE INSTALLER HAS THE FINAL RESPONSIBILITY FOR THE STRENGTH AND RIGIDITY OF THE WALL/CEILING STRUCTURE.
- A MINIMUM OF 2 PEOPLE REQUIRED WHEN INSTALLING LONG LENGTH FIXTURES.

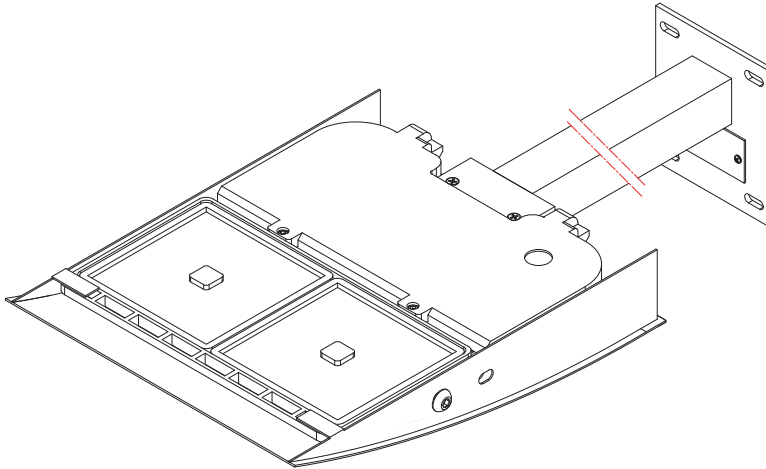


LUMINAIRE SHOWN AS AN UPLIGHT

## PACKAGE INCLUDES


Leaf® 3650  
Fixture(s)

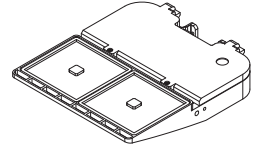

Butterfly® 3600  
Shroud(s)  
w/ Side Screws

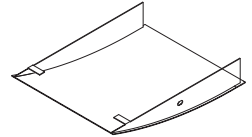


Extended Arm(s)  
w/ Shim

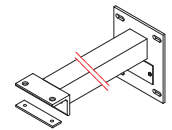

Top Screw(s)



## MOUNT DIMENSIONS

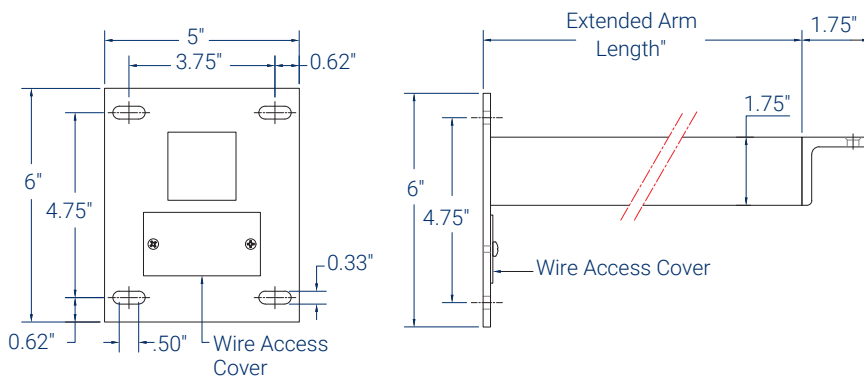

## ITEMS NEEDED (BY OTHERS)


Mounting  
Hardware




Hand Drill  
+ Drill Bit(s)



Hand Tool




## ISOMETRIC / EXPLODED VIEW

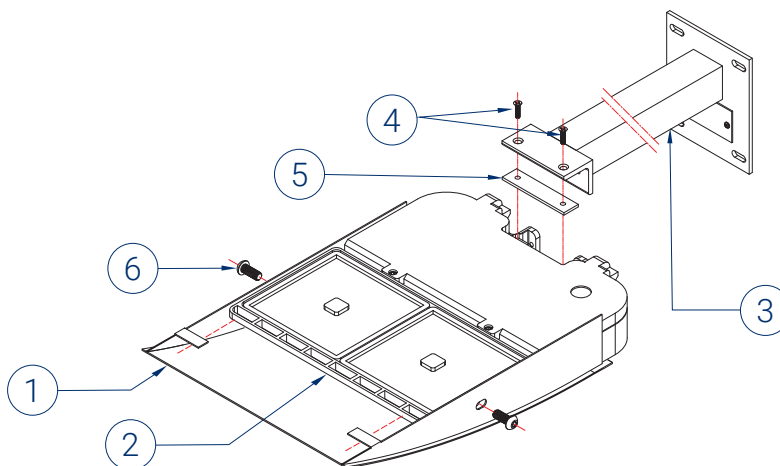


- (1) Butterfly® 3600 Fixture
- (2) Leaf® 3650 Fixture
- (3) Extended Arm Mount
- (4) Top Screws
- (5) Shim
- (6) Side Screws

**1 MOUNT EXTENDED ARM SWIVEL PLATE TO SURFACE**

- INSERT MOUNTING HARDWARE THROUGH THE SLOTTED MOUNTING HOLES ONTO DESIRED SURFACE UNTIL SECURE.

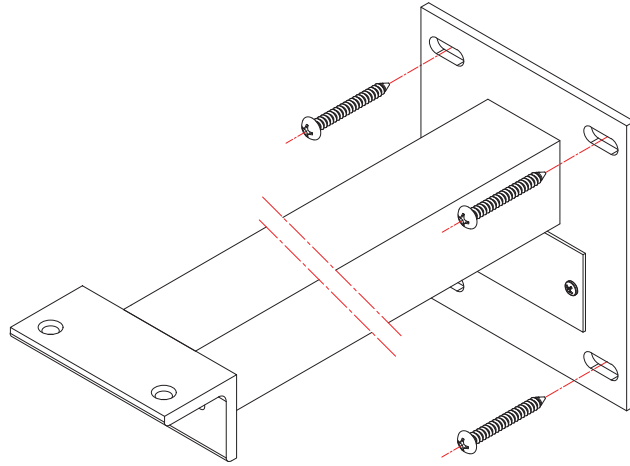**2 ATTACH LEAF FIXTURE TO EXTENDED ARM**

- ALIGN TOP SCREWS (PROVIDED) WITH THE MOUNTING PLATE, SHIM, AND FIXTURE.
- TIGHTEN SCREWS UNTIL SECURE.

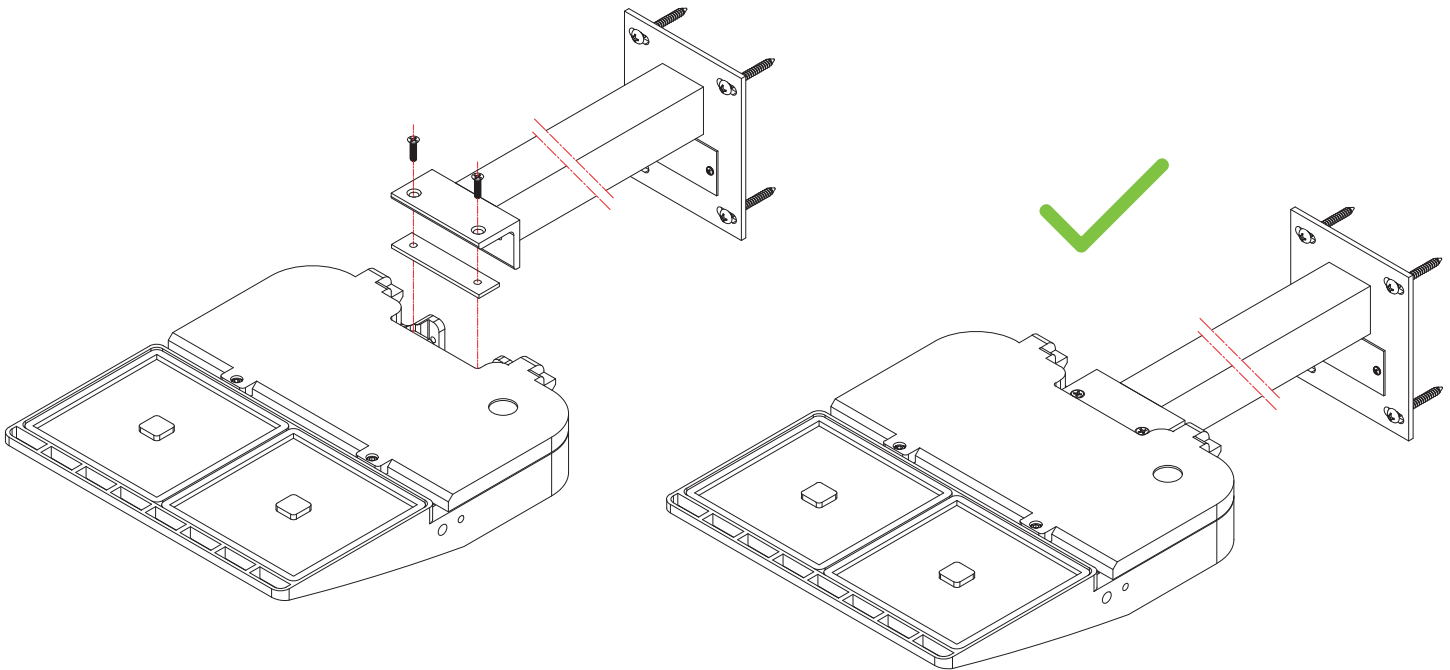

**3 ATTACH SHROUD TO FIXTURE**

- PLACE THE INSIDE LIP OF THE SHROUD ON THE FRONT TOP OF THE FIXTURE.
- SECURE BY TIGHTENING SCREWS ON BOTH SIDES OF SHROUD UNTIL SECURE.

