
*Read Complete Instruction before starting installation.

Install and use this product following your local electrical codes and regulations.





STEP #1 - Attach Swivel Canopy Mounting Bracket

- Turn off current at fuse or circuit breaker.
- Place rubber washers between ceiling fixture box and black bracket.
- Align holes and secure bracket to box using $1\frac{1}{2}$ machine screws, flat washers and lock washers supplied. (Fig. A)

STEP #2 - Attach Stem to Pendant Box

- Feed Power Cord/Wires through Stem
- Secure Stem to Pendant Box until holes align (Fig. B) 2.
- 3. Once aligned, tighten small screw through Stem hole
- Slip Canopy Cover onto Stem
- Slide Leveling Half-ball on Stem, lock Pin into leveling half-ball and secure with set screw (Fig. C)

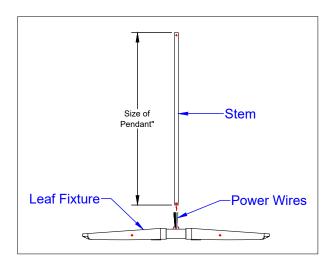


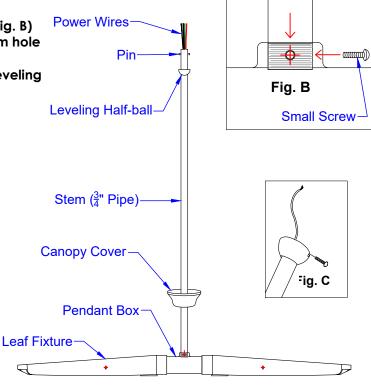

STEP #3 - Attach Stem to Mounting Bracket

NOTE: Requires two people minimum

- 6. Lift Double Leaf fixture and slip Stem/Leveling Half-ball onto Mounting bracket. (Fig. D)
- 7. Connect green grounding wire of leveling ball to grounding conductor in ceiling fixture box.
- 8. Make proper wire connections in ceiling box
- 9. Place canopy cover into proper position over black bracket and secure with screws (Fig. D)

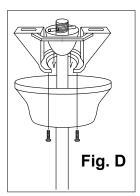

UNLESS OTHERWISE SPECIFIED:			
DIMENSIONS ARE IN INCHES			
TOLERANCES:			
FRACTIONAL ± 1/16			
ANGULAR:			
MACH ±0.5 BEND ± 0.03			
TWO PLACE DECIMAL ±.030			
TUDEE DI ACE DECIMALI I ALE			

	NAME	DATE	Title:
DRAWN BY:	RA	3/03/20	
CHECKED	-	-	
ENG RE.			
MATERIAL:			

3650 Leaf Series - Double Pendant

Installation Instructions



SPECIFICATIONS are subject to change in accordance w/ improvements & technical innovat THE INFORMATION contained in this drawing is the SOLE PROPERTY of ORGANIC LIGHTING any

Scale: Varies DO NOT SCALE DRAWING Size: A Sheet: 1 of 1