
Omegalume® 5000 / Swivel Mount


ORGATECH®

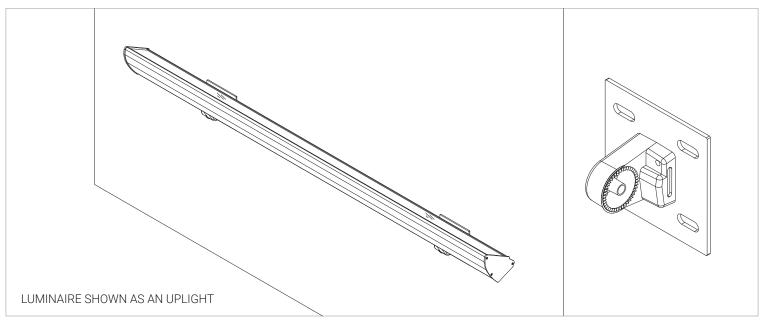


- · READ THE PROVIDED INSTRUCTIONS PRIOR TO INSTALLING.
- · INSTALLATION SHOULD BE CARRIED OUT BY QUALIFIED INSTALLERS.
- •THE INSTALLER HAS THE FINAL RESPONSIBILITY FOR THE STRENGTH AND RIGIDITY OF THE WALL/CEILING STRUCTURE.
- · A MINIMUM OF 2 PEOPLE REQUIRED WHEN INSTALLING LONG LENGTH FIXTURES.



MOUNT DIMENSIONS

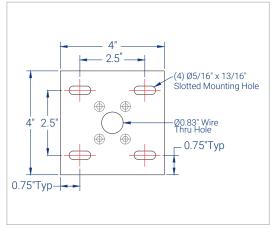


PACKAGE INCLUDES

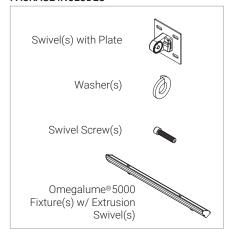

ITEMS NEEDED (BY OTHERS)



ISOMETRIC VIEW

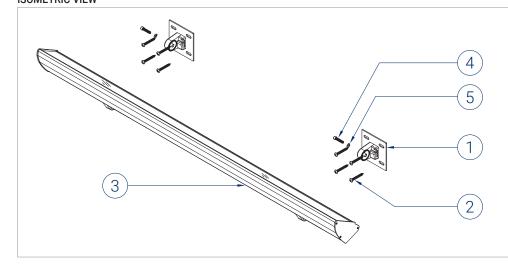


- (1) Mount Swivel with Plate
- (2) Mounting Hardware (by others)
- (3) Omegalume® 5000 Fixture with Extrusion Swivel(s)
- (4) Swivel Screw
- (5) Washer




1 MOUNT SWIVEL PLATE(S) TO SURFACE

- · MEASURE AND MARK THE SURFACE ACCORDING TO THE "FIXTURE MOUNTING SPECIFICATIONS" CHART (BELOW) TO ENSURE ACCURATE PLACEMENT OF SWIVEL MOUNT PLATES(S).
- · BEFORE MOUNTING TO SURFACE, ENSURE STEP #2 IS COMPLETED FIRST.

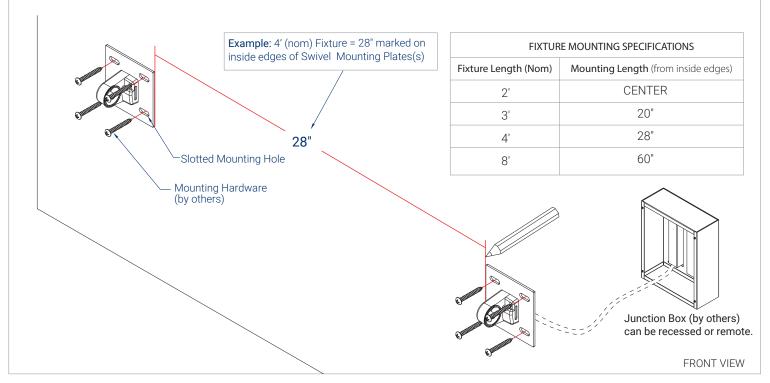



2 FEED WIRE(S)

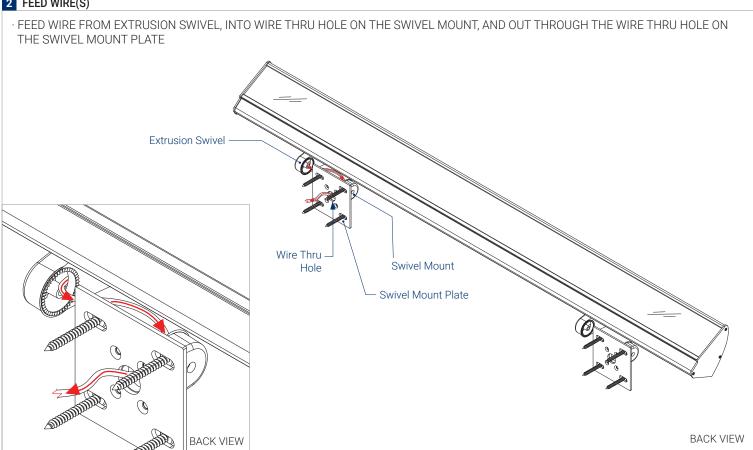

3 ATTACH SWIVEL(S)

- · ATTACH EXTRUSION SWIVEL(S) ONTO MOUNT SWIVEL(S) WITH PLATE.
- · USE THE SWIVEL SCREW(S) AND WASHER(S) TO LOOSELY ATTACH THE MOUNT(S) TOGETHER.
- THE WASHER PRECEDES THE SCREW (SEE ILLUSTRATION).

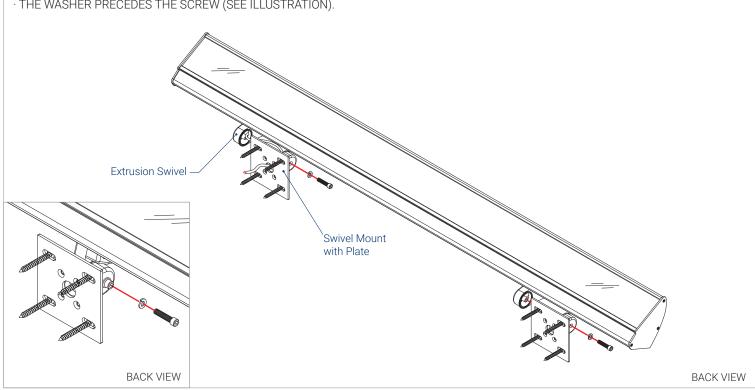

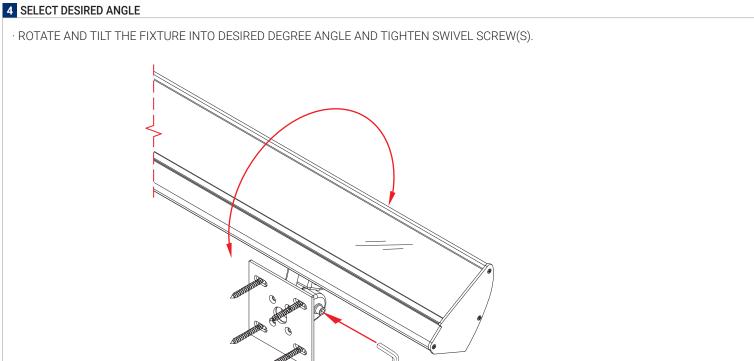

BACK VIEW